



LM Guide for Medium-to-Low Vacuum

Achieves a stable rolling resistance in an environment at pressure from atmospheric pressure to vacuum (10⁻³ Pa) Newly developed: Uses a labyrinth end seal dedicated for Medium-to-Low Vacuum

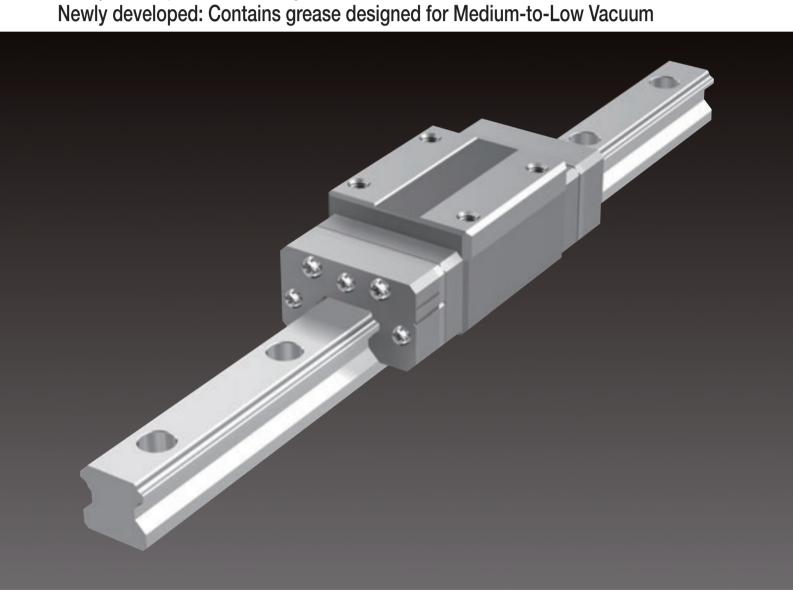

LM Guide for Medium-to-Low Vacuum

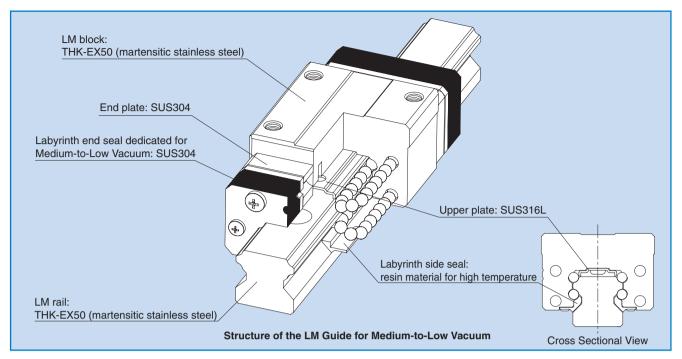


Features

- Operable in various environments at pressure between atmospheric pressure and vacuum (10-3 Pa).
- Capable of withstanding baking temperature up to 200°C.*
- Use of a newly developed labyrinth end seal dedicated for Medium-to-Low Vacuum increases grease retention and allows extended use in vacuum.
- Use of grease designed for Medium-to-Low Vacuum achieves a stable rolling resistance.
 * If the baking temperature exceeds 100°C, multiply the basic load rating with the temperature coefficient.

Structure of the labyrinth end seal dedicated for Medium-to-Low Vacuum

The labyrinth end seal dedicated for Medium-to-Low Vacuum forms a multi-stage space as shown in the figure on the right to minimize the pressure difference between adjacent stages. This reduces the outflow velocity of the oil inside the LM block to a minimum. In addition, the seal will not affect the rolling resistance since it does not contact the LM rail.

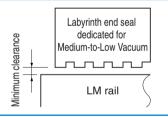


Achievable vacuum level

The LM Guide for Medium-to-Low Vacuum demonstrates an excellent achievable vacuum level.

[Test conditions] Temperature: 25°C (±5°C)

	HSR15M1RVV	HSR15R (for reference)			
Grease	Grease for Medium-to-Low Vacuum	AFB-LF Grease			
Seal	Labyrinth end seal dedicated for Medium-to-Low Vacuum	None			
End plate	Stainless steel	Resin			

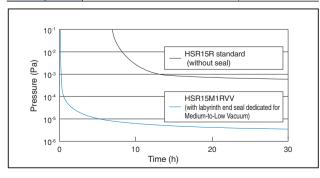


Achievable vacuum level

Rolling resistance

The grease used in the LM Guide for Medium-to-Low Vacuum has a smaller rolling resistance than conventional fluorine grease and ensures stable rolling motion.

Specimen: HSR15M1RVV Temperature: 25°C (±5°C) Pressure: atmospheric pressure

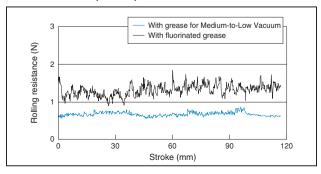



Rolling resistance fluctuation



Model HSR15M1R-VV

Dimensional table for model HSR15M1R-VV

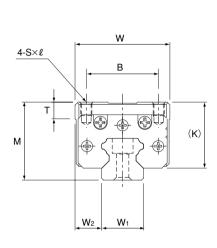

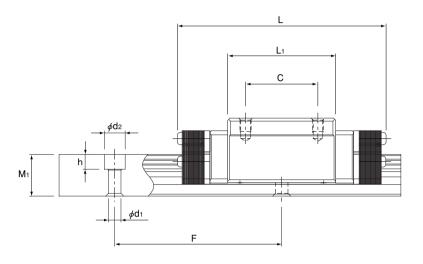

Unit: mm

	Ou	iter dimensio	ons	LM block dimensions								
Model No.	Height M	Width W	Length L	В	С	S×ℓ	L ₁	Т	K			
HSR15M1R-VV	28	34	75	26	26	M4×5	38.8	6	23.7			

Unit: mm

	LM rail dimensions					Basic load rating		Static permissible moment [kN-m]					Mass	
Model No.	Width							N	1 A	N	1в	Мc	LM	LM
Model No.	W ₁		Height	Pitch		С	C ₀					(1)	block	rail
	±0.05	W_2	M ₁	F	$d_1 \times d_2 \times h$	[kN]	[kN]	1 block	Double blocks	1 block	Double blocks	1 block	[kg]	[kg/m]
HSR15M1R-VV	15	9.5	15	60	4.5×7.5 ×5.3	8.33	13.5	0.0805	0.457	0.0805	0.457	0.0844	0.27	1.5

Note If you desire a product other than the model numbers indicated above, contact THK.

Static permissible moment* 1 block: static permissible moment value with 1 LM block

Double blocks: static permissible moment value with 2 LM blocks closely contacting with each other

Example of model number coding

HSR15M1R 1 VV C1 + 400L P - II

blocks on one rail

Model number

Radial clearance symbol Labyrinth seal symbol* Number of LM

Number of rails used on the same plane Accuracy symbol

LM rail length (mm)



^{*} This symbol in this example represents use of a labyrinth end seal for Medium-to-Low Vacuum + a labyrinth side seal.

Note 1: The radial clearance, maximum LM rail length and accuracy class are equal to that of model HSR. See the general catalog for details.

Note 2: With this model, a single-rail unit constitutes one set (i.e., the required number of sets when 2 rails are used in parallel is 2).

TTHK LM Guide for Medium-to-Low Vacuum



Precautions on Use

Handling

- Pulling out the LM block from the LM rail will cause balls to fall. When removing the LM block from the LM rail and then replacing the block, an LM block removing/mounting jig is available. Contact THK for details.
- Do not disassemble the parts. Doing so may cause entrance of dust or a functional loss.
- Tilting the LM block or the LM rail may cause it to fall by its own weight.
- Do not drop or hit the LM Guide. Doing so may cause injury. It may also cause failure or breakage. Applying an impact to the product may cause a functional loss even if it may look intact.
- The product is provided with moisture-proof packaging after thoroughly degreased and cleaned. Unpack the product immediately before use whenever it is possible.
- After unpacking the product, store it in a clean dry container together with a desiccant (e.g., silica gel). Do not apply anticorrosive oil or use volatile corrosion inhibitor paper (agent).
- When handling the product, use vinvl gloves or the like in a clean place.

Service temperature range

 The maximum service temperature of the product is 200°C. If using the product in an environment at temperature exceeding 100°C, be sure to take into account the temperature coefficient when calculating the rated life and the static safety factor. See the general catalog for details.

Service environment and lubrication

- Use this product in a clean place under an environment at pressure from atmosphere pressure to vacuum (10⁻³ Pa).
- This product contains a lubricant dedicated for Medium-to-Low Vacuum. Do not mix lubricants of different properties when using the
- · This product does not have a grease nipple or an oil hole for greasing (replenishment of grease is not allowed). The product must be used with the initially supplied lubricant. Contact THK for details.

Storage

· When storing the LM Guide, enclose it in a package designated by THK and store it in a horizontal orientation in a place controlled to a constant environment while avoiding high temperature, low temperature and high humidity.

• "LM GUIDE" and " / are registered trademarks of THK CO., LTD.

- The photo may differ slightly in appearance from the actual product.
- The appearance and specifications of the product are subject to change without notice. Contact THK before placing an order.
- Although great care has been taken in the production of this catalog, THK will not take any responsibility for damage resulting from typographical errors or omissions.
- For the export of our products or technologies and for the sale for exports, THK in principle complies with the foreign exchange law and the Foreign Exchange and Foreign Trade Control Law as well as other relevant laws. All rights reserved For export of THK products as single items, contact THK in advance.

THK CO., LTD.

HEAD OFFICE 3-11-6, NISHI-GOTANDA, SHINAGAWA-KU, TOKYO 141-8503 JAPAN

INTERNATIONAL SALES DEPARTMENT PHONE: +81-3-5434-0351 FAX: +81-3-5434-0353

Global site: http://www.thk.com/

NORTH AMERICA

THK America,Inc.

HEADQUARTERS

- Phone:+1-847-310-1111 Fax:+1-847-310-1271 ●CHICAGO OFFICE
- Phone:+1-847-310-1111 Fax:+1-847-310-1182
- NEW YORK OFFICE
- Phone:+1-845-369-4035 Fax:+1-845-369-4909
- ATLANTA OFFICE
- Phone:+1-770-840-7990 Fax:+1-770-840-7897
- ●LOS ANGELES OFFICE
- Phone:+1-949-955-3145 Fax:+1-949-955-3149
- SAN FRANCISCO OFFICE Phone:+1-925-455-8948 Fax:+1-925-455-8965
- ●BOSTON OFFICE
- Phone:+1-781-575-1151 Fax:+1-781-575-9295
- **ODETROIT OFFICE**
- Phone:+1-248-858-9330 Fax:+1-248-858-9455 TORONTO OFFICE
- Phone:+1-905-820-7800 Fax:+1-905-820-7811

SOUTH AMERICA

THK Brasil LTDA

Phone:+55-11-3767-0100 Fax:+55-11-3767-0101

EUROPE

THK GmbH

■FUROPEAN HEADQUARTERS

Phone:+49-2102-7425-0 Fax:+49-2102-7425-217

●DÜSSELDORF OFFICE

Phone:+49-2102-7425-0 Fax:+49-2102-7425-299

•FRANKFURT OFFICE

- Phone:+49-2102-7425-650 Fax:+49-2102-7425-699
- STUTTGART OFFICE
- Fax:+49-7150-9199-888 Phone:+49-7150-9199-0
- **MÜNCHEN OFFICE**
- Phone:+49-8937-0616-0 Fax:+49-8937-0616-26 •U.K. OFFICE
- Phone:+44-1908-30-3050 Fax:+44-1908-30-3070

 ■ITALY MILANO OFFICE Fax:+39-039-284-2527
- Phone:+39-039-284-2079
- **OITALY BOLOGNA OFFICE** Fax:+39-051-641-2230
- Phone:+39-051-641-2211 SWEDEN OFFICE
- Phone: +46-8-445-7630 Fax:+46-8-445-7639
- AUSTRIA OFFICE
 - Phone:+43-7229-51400 Fax:+43-7229-51400-79
- SPAIN OFFICE
- Phone:+34-93-652-5740 Fax:+34-93-652-5746 **OTURKEY OFFICE**
- Phone:+90-216-362-4050 Fax:+90-216-569-7150 PRAGUE OFFICE
- Phone:+420-2-41025-100 Fax:+420-2-41025-199 THK France S.A.S. Phone:+33-4-3749-1400 Fax:+33-4-3749-1401

CHINA

THK (CHINA) CO.,LTD.

HEADQUARTERS

Phone:+86-411-8733-7111 Fax:+86-411-8733-7000

OSHANGHAI OFFICE

- Phone:+86-21-6219-3000 Fax:+86-21-6219-9890
- ●BELING OFFICE
- Phone:+86-10-8441-7277 Fax:+86-10-6590-3557 **OCHENGDU OFFICE**
- Phone:+86-28-8526-8025 Fax:+86-28-8525-6357
- •GUANGZHOU OFFICE Phone:+86-20-8523-8418
- Fax:+86-20-3801-0456 THK (SHANGHAI) CO.,LTD. Phone:+86-21-6275-5280 Fax:+86-21-6219-9890

TAIWAN

- THK TAIWAN CO.,LTD. ●TAIPEI HEAD OFFICE
- Phone:+886-2-2888-3818 Fax:+886-2-2888-3819 **TAICHUNG OFFICE**
- Phone:+886-4-2359-1505 Fax:+886-4-2359-1506 TAINAN OFFICE
- Phone:+886-6-289-7668 Fax:+886-6-289-7669 KORFA

SEOUL REPRESENTATIVE OFFICE

Phone:+82-2-3468-4351 Fax:+82-2-3468-4353

SINGAPORE

THK LM SYSTEM Pte. Ltd. Phone:+65-6884-5500 Fax:+65-6884-5550

INDIA

BANGALORE REPRESENTATIVE OFFICE

Phone:+91-80-2330-1524 Fax:+91-80-2314-8226

